



LECCY & GENESIS
DoorBell V2

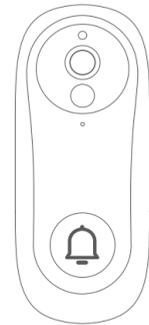

User Manual

www.urjasmart.com

I. Product Appearance

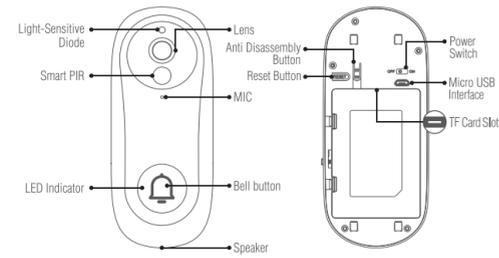

II. Inside the Box




The images here are for reference only.

- 1 -

www.urjasmart.com


III. Download the APP

Scan the code and download the app

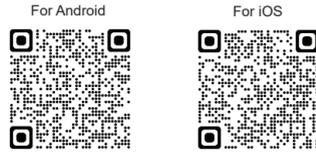

IV. Register and Login

Open the "Stavix" APP, press "Fast Register" to register a new account. If you have an account, you can log in with your account & password.

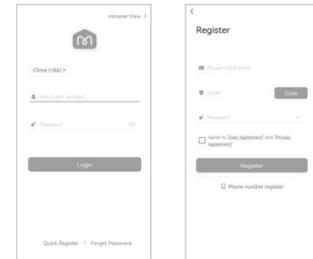

- 2 -

www.urjasmart.com

V. Operation Guide



1. Add device

Special reminder: Keep the doorbell, Indoor Chime Unit and router as close as possible (to avoid network failure). After logging in, click the "+" button in the upper right corner of the interface and select the QR code to add the device.



Method 1: Scan the QR code to Add Automatically

Toggle the doorbell power button to ON and make sure the doorbell light is flashing.


Toggle the doorbell power button to ON position, the doorbell is on.

- 3 -

www.urjasmart.com



Click the "+" button on the upper right corner of the app and scan the QR code from the box.

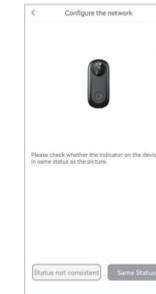

If the red LED on the device flashes, it indicates it is receiving the configuration data from the device. Click same status.

- 4 -

www.urjasmart.com



Input the WiFi name & password to connect the device to WiFi, click Next. Note: The mobile device must be connected to a 2.4 GHz Wifi Network



QR code will pop up in the screen of mobile phone. Please put the QR code in front of the Doorbell at 15-20 cm. On receiving the voice prompt, tap on 'Hear Voice Prompts' button on the app

- 5 -

www.urjasmart.com



After confirming, it will notify that it is connecting to the LAN, and then go to the countdown interface.



After successful binding, give the device a name; click "Done". The APP terminal interface will prompt: Device added successfully.

- 6 -

www.urjasmart.com



Method 2: Manually add

Select "Manually" below to enter the interface of manually adding a device list; select "Video Surveillance" - "Doorbell" - "MD4L".

Note: After tapping on 'MD4L', follow the steps from 3-5 from Method 1 (mentioned above)



Enter the countdown interface, and click "Add" on the searched target device.

- 7 -

www.urjasmart.com



After successful addition, give the device a name and click "Done".

2. How to pair and unpair the chime unit with the doorbell

Pair: plug the indoor chime unit into power and wait when the blue light is always on, and then press the doorbell button, when the indoor chime unit's blue light turns to flash, then the pairing is completed. (you can switch the ringtone by pressing music button on the indoor chime unit)

Unpair: Press and hold the volume button until the blue light is always on. Your chime is now unpaired from the doorbell.

- 8 -

www.urjasmart.com

3. Video Doorbell Installation Method


Special Note:

- Keep the doorbell, indoor chime unit and router as close as possible (to avoid network failure due to too far).
- The installation height of the doorbell is 1.2-1.5 meters.
- It should be installed on non-metallic materials (to avoid signal shielding), and it is recommended to stick it on the wall of the door.

Installation Method 1:

- Tear off the red 3M sticker from the back of the bottom cover, and then paste it on a smooth wall (such as glass, ceramic tiles, latex wall paint, etc.)
- Hang the doorbell from top to bottom on the base of the upper wall to complete the installation.

Note: For the best results, leave the adhesive for 24 hours

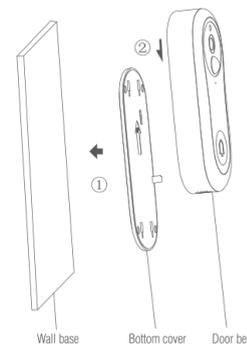

- 9 -

www.urjasmart.com


Installation Method 2: Fix on the wall with screws

- Press against the back of the doorbell, and push down to get the back cover off the doorbell
- Drill four pilot holes into the wall plate, and insert plastic plugs into holes. Secure the back cover with screws.
- Align the doorbell with four buckles, and push doorbell down to fix.



Press against the back of the door bell, and push down to get the back cover.

Drill four pilot holes into the wall plate, and insert plastic plugs into holes. Secure the back cover with screws.

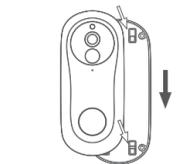


Align the doorbell with four buckles, and push doorbell down to fix.

- 10 -

www.urjasmart.com

Installation anti-dismantling diagram:

- Install a screw to lock the doorbell and rear panel

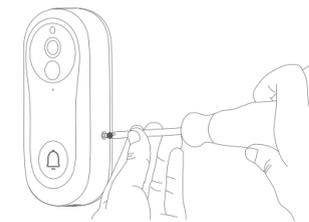

- 11 -

www.urjasmart.com

VI. Function Description

- Definition: 1080p (1920*1080) super clear resolution, clear picture, delicate and realistic.
- Viewing angle: With a 148° large wide-angle lens, the view is wide, and the whole family has a panoramic view.
- Two-way audio: Bring you real-time intercom, to make the communication easy.
- Night vision: The camera will turn on the night vision function automatically according to the ambient light. After opening the screen will appear black and white, indoor conditions are clearly visible in 7 meters.
- Recording storage: support video recording and screenshots, support for guest visits, automatic recording; visitors press the doorbell, will notify the phone, will also automatically record video to the Micro SD card, you can view the visitor record.
- PIR motion detection: Send alert to your phone when visitor is at your front door or when motion detection is triggered.
- Instant alert: Get instant alerts when visitor presses the doorbell or when the built-in motion sensor is triggered. You can watch real-time videos, intercom with the visitor via your phone.

- 12 -

www.urjasmart.com

VII. Common Problems

1. Video Doorbell LED indicator and buzzer status:

Status	LED light	Buzzer
System startup	Red light flashes	None
Waiting for distribution network	Red light flashes	None
Scanning QR code	Red light flashes	None
Scanning the QR code successfully	Red light flashes	Di (short sound)
Connecting WiFi	Red light flashes quickly	None
Connect to WiFi successfully	LED light is off	None
Failed to connect WiFi	Red light flashes	None
Reset success	Red light flashes	Di (short sound)
PIR wake up	Blue light flashes	None
Wake up by doorbell	Blue light flashes	None
Low battery reminder	Red light keep on 5s	None

2. Note: Make sure the Doorbell is connected to WiFi in the 2.4 GHz band.

5GHz WiFi is not supported. Please make sure that the WiFi signal of the wireless router connected to the doorbell is within the coverage.

3. What is the Operating Temperature of the Video Doorbell?

The applicable temperature range: -10°C to +50°C.

Thank You!

Whatsapp & Support

81-81-81-0654 | 844-77-46047

Support: www.urjasmart.com/support

- 13 -

www.urjasmart.com